

Chapter 12 Maintenance



Warning

Disconnect power before performing maintenance. Although dangerous voltage levels are not exposed, disconnecting power will ensure an electric shock hazard is not present.

GENERAL

The modem contains no internal electronic components that can be serviced or replaced by the user. Repairs should not be attempted by the user.

FUSE

If a fuse fails, replace it with one of equal rating. Repeated failure indicates a more serious problem.

MAINTENANCE

The modem provides maintenance free service. Periodically it is necessary to remove dust that has collected on internal components. Remove dust with a soft bristle brush and low pressure air or vacuum.

Before attempting diagnostic tests, check that all connectors and plugs are firmly inserted. The test procedures will identify the faulty component in a bad communications link.

If the unit appears faulty, contact the Motorola Field Service Department at 1-800-221-4380 for service and assistance. Do not return the unit without prior instructions.

