

# Table of Contents

## V.3400

### Chapter 1 Introduction

GENERAL .....	1-1
FEATURES .....	1-1
Data Mode.....	1-1
Fax Mode .....	1-3
COMMUNICATIONS SOFTWARE .....	1-3
DESCRIPTION .....	1-3
Functional .....	1-3
Physical .....	1-4

### Chapter 2 Installation

GENERAL .....	2-1
ELECTRICAL INSTALLATION .....	2-1
AC Power Connection .....	2-1
DC Power Connection .....	2-1
DTE CONNECTION .....	2-2
TELEPHONE LINE CONNECTION .....	2-5
PSTN Connection .....	2-5
Permissive .....	2-7
Programmable .....	2-7
Leased Line Connection .....	2-7

### Chapter 3 Getting Started

OPTION SELECTION .....	3-1
POWERUP .....	3-1
PLACING A CALL .....	3-2
Using a Standard Telephone .....	3-2
Autodial from Front Panel .....	3-2
Autodial from a Terminal with the AT Command Set .....	3-2
ANSWERING A CALL .....	3-3
Autoanswer .....	3-3
Manual Answer .....	3-3
Answer from Terminal with AT Command Set .....	3-3
ENDING A CALL .....	3-3
Call Termination from Front Panel .....	3-3

Call Termination from Terminal with AT Command Set .....	3-3
Reasons for Call Termination .....	3-3
<b>Chapter 4 Front Panel Operation</b>	
GENERAL .....	4-1
LED DESCRIPTIONS .....	4-1
LCD MENUS .....	4-2
LCD MENU OPERATION .....	4-2
FRONT PANEL SECURITY .....	4-11
<b>Chapter 5 AT Commands</b>	
GENERAL .....	5-1
COMMAND CATEGORIES .....	5-1
OPERATION MODES .....	5-1
Offline Command Mode .....	5-2
Online Command Mode .....	5-2
Data Mode .....	5-2
SENDING COMMANDS TO THE MODEM .....	5-2
Creating a Command Statement .....	5-3
Autobaud .....	5-3
Guidelines for Creating Command Statements .....	5-4
Monitor Display .....	5-4
Command Statement Buffer .....	5-4
Backspace Key .....	5-5
Repeating a Command.....	5-5
Numbered Commands .....	5-5
Group Commands .....	5-5
RESPONSE COMMANDS .....	5-6
Digit / Word Selection .....	5-6
Response Displays .....	5-7
Negotiation Displays .....	5-7
Protocol Result Codes .....	5-7
Call Progress / Connect Speed Messages .....	5-7
Number Code Application .....	5-9
Response Number Codes / Messages .....	5-10
DIAL COMMANDS .....	5-13
Dialing .....	5-13
Tone Dialing .....	5-14

Pulse Dialing .....	5-14
Insert Long Pause .....	5-14
Wait for Second Dial Tone .....	5-15
Hook Flash .....	5-15
Switching to Answer Mode after Dialing .....	5-15
Remaining in Command Mode .....	5-15
Wait for 5 Seconds of Silence .....	5-16
Dialing a Stored Telephone Number .....	5-16
Autodial Number Location .....	5-16
Voice Calls .....	5-16
Switching from Voice to Data .....	5-17
<b>ANSWERING A CALL .....</b>	<b>5-17</b>
Manual Answer .....	5-17
AT Command Answer .....	5-17
Autoanswer .....	5-17
<b>TERMINAL INTERFACE COMMANDS .....</b>	<b>5-18</b>
Data Carrier Detect .....	5-18
Data Set Ready .....	5-19
Data Terminal Ready .....	5-19
Serial Port Ring Indicator (Pin 22) .....	5-20
Request to Send / Clear to Send .....	5-20
DTE Controlled Fallback Rate (Pin 23) .....	5-21
<b>GENERAL COMMANDS .....</b>	<b>5-21</b>
Changing from Data Mode to Command Mode .....	5-21
Local Character Echo .....	5-21
Online Character Echo .....	5-22
Hanging Up .....	5-22
Fast Disconnect .....	5-22
EPROM Check .....	5-23
Speaker Volume .....	5-23
Speaker Control .....	5-23
Return Online .....	5-24
Long Space Disconnect .....	5-24
V.22 bis Guard Tones .....	5-24
Asynchronous / Synchronous Mode Selection .....	5-25
Make / Break Dial Pulse Ratio .....	5-26
Synchronous Transmit Clock Source .....	5-26

V.34 Rate Selection Thresholds .....	5-26
V.34 Asymmetric Bit Rates .....	5-27
Modulation .....	5-27
Maximum DCE Speed .....	5-28
Minimum DCE Speed .....	5-29
Auto Retrain .....	5-29
Automatic Rate Adaption .....	5-30
Manual Rate Adaption .....	5-31
Product Revision Level .....	5-31
Online Quick Reference .....	5-31
Product Serial Number .....	5-31
Permissive / Programmable .....	5-32
Talk / Data .....	5-32
V.32 Fast Train .....	5-32
Incoming Call .....	5-32
Line Current Disconnect .....	5-33
Disable AT Command Set .....	5-33
Dial Line Transmit Level .....	5-33
PRIVATE LINE OPERATION .....	5-34
4-Wire Operation .....	5-34
2-Wire Operation .....	5-34
2-wire Leased Line Operation .....	5-34
2-wire Dial-up Operation .....	5-35
Dial Backup .....	5-35
Dial / Leased Line .....	5-36
Dial Backup .....	5-37
Return to Leased Line from Dial Backup.....	5-37
Manual Dial Backup.....	5-37
Answer / Originate .....	5-37
Leased Line Transmit Level .....	5-37
CONFIGURATION COMMANDS .....	5-38
CONFIGURATION PROFILES .....	5-38
Active Profile .....	5-38
Stored Profile .....	5-38
Factory Profile .....	5-38
Storing a Configuration .....	5-39
Powerup Option Set .....	5-40

Load Factory Options .....	5-40
Reset to Stored Configuration .....	5-41
View Configuration Profiles / Received Signal Options .....	5-41
Storing a Telephone Command Line .....	5-41
Retaining / Restoring Options .....	5-42
<b>REMOTE CONFIGURATION</b> .....	<b>5-43</b>
Remote Configuration Security .....	5-43
Remote Security Code .....	5-43
Entering Remote Configuration .....	5-44
<b>Chapter 6 Protocols</b>	
CCITT V.42 BIS ERROR CONTROL PROTOCOL .....	6-1
RELIABLE .....	6-1
AUTO-RELIABLE .....	6-1
CONSTANT SPEED INTERFACE .....	6-2
DATA COMPRESSION .....	6-2
NORMAL MODE .....	6-2
DIRECT MODE .....	6-2
FLOW CONTROL .....	6-3
PROTOCOL COMMANDS .....	6-3
Disconnect Buffer Delay .....	6-4
Serial Port (DTE) Constant Speed .....	6-4
V.42 Optional Detection Phase .....	6-4
Operating Mode .....	6-5
Auto-Reliable Fallback Character .....	6-5
Serial Port Flow Control .....	6-6
XON/XOFF Pass Through .....	6-7
Data Link Flow Control .....	6-8
Break Control .....	6-8
Inactivity Timer .....	6-10
Maximum Reliable Block Size .....	6-10
Transmit Break / Set Break Length .....	6-11
Set Auto-Reliable Buffer .....	6-11
V.42bis Data Compression .....	6-11
<b>Chapter 7 Test Mode Operation</b>	
GENERAL .....	7-1
Test Categories .....	7-1

Terminating a Test in Progress .....	7-2
TESTING THE LOCAL MODEM .....	7-3
Local Analog Loopback .....	7-3
Local Analog Loopback with Self Test .....	7-4
TESTING THE REMOTE MODEM .....	7-5
Local Digital Loopback .....	7-5
Grant/Deny RDL Request .....	7-6
Remote Digital Loopback .....	7-7
Remote Digital Loopback with Self Test .....	7-7
Test Pattern .....	7-8
Bilateral Test Enable / Disable .....	7-9
DTE Controlled Remote Digital Loopback (Pin 21) .....	7-9
DTE Controlled Local Analog Loopback (Pin 18) .....	7-9
<b>Chapter 8 Security</b>	
GENERAL .....	8-1
AUTOCALLBACK SECURITY .....	8-1
LOW SECURITY OPERATION .....	8-1
Operating without Low Security .....	8-1
Operating with Low Security .....	8-2
Remote Operation .....	8-2
Local Operation .....	8-2
Passwords .....	8-2
LCD Indication of Security .....	8-3
Restrictions in Security Operation .....	8-3
LOW SECURITY COMMANDS .....	8-3
Set Password .....	8-3
Changing a Password .....	8-3
Deleting a Password .....	8-3
Security Reset .....	8-3
Disabling Security .....	8-3
Security Status .....	8-4
Enabling Security .....	8-4
HIGH SECURITY .....	8-4
Compatibility .....	8-4
Capacity .....	8-4
Operating without High Security .....	8-4
Operating with High Security .....	8-4

SECURITY LEVELS .....	8-5
Level 1: Password Only .....	8-5
Level 2: Password with Callback .....	8-5
Level 3: Password with Callback and Password Re-Entry ....	8-5
SUPERUSER .....	8-5
Passwords .....	8-6
Default Passwords.....	8-6
HIGH SECURITY COMMANDS .....	8-6
Enabling High Security .....	8-6
Disabling High Security .....	8-7
Setting Passwords .....	8-7
Set Security Levels .....	8-8
Set User Callback Number .....	8-8
Extended Features.....	8-9
\$W1 .....	8-9
\$W2 .....	8-9
\$W0 .....	8-9
Display Extended Feature Status .....	8-9
Display / Reset Illegal Access Attempt Counters .....	8-9
Factory Reset .....	8-10
Removing a User .....	8-10
Security Status .....	8-10
Display User Status .....	8-10
Verify User Information .....	8-11
Request Superuser Privilege .....	8-11
Local Logon Command .....	8-11
Local Logoff Command .....	8-11
Remote Logon Procedure .....	8-11
<b>Chapter 9 Fax Operation</b>	
GENERAL .....	9-1
FAX OPERATION .....	9-1
MODEM INITIALIZATION .....	9-2
FAX DEFAULTS .....	9-2
Fax Autoanswer .....	9-2
FAX ASSOCIATED OPTIONS .....	9-3
Stored FAX Profile .....	9-3
CLASS 1 DETAILS .....	9-3

CLASS 1 COMMANDS .....	9-4
Dial Command .....	9-4
Answer Command .....	9-5
On Hook .....	9-5
Off Hook .....	9-6
Class 0 Operation .....	9-6
Class 1 Operation .....	9-6
Service Class Indication .....	9-6
Service Class Capabilities .....	9-6
Transmit Silence .....	9-6
Receive Silence .....	9-7
Fax Transmit and Receive Modes .....	9-7
Facsimile Transmit .....	9-8
Facsimile Receive .....	9-8
HDLC Transmit .....	9-8
HDLC Receive .....	9-9
Test Supported Range of Values .....	9-9
Class 1 Result Code .....	9-9
Fax Auto Answer .....	9-10
BINARY FILE TRANSFER .....	9-10

**Chapter 10 Status Registers**

S-REGISTERS .....	10-1
S-REGISTER OPERATION .....	10-3
Changing Register Values .....	10-3
Individual Bit Command .....	10-4
Autoanswer .....	10-5
Ring Count .....	10-5
Escape Character .....	10-5
End-of-Line Character .....	10-5
Line Feed Character .....	10-6
Backspace Character .....	10-6
Pause Before Dialing .....	10-6
Pause for Ringback and Carrier Detection / Wait for 2nd Dial Tone .....	10-6
Pause Interval for Comma .....	10-6
Carrier Detect Time .....	10-6
Lost Carrier Detect Time .....	10-7

DTMF Tone Duration .....	10-7
Escape Sequence Pause .....	10-7
S13 .....	10-7
Bit Mapped .....	10-8
S15 .....	10-8
System Tests .....	10-9
S17 .....	10-9
Test Timeout .....	10-9
S19, 20 .....	10-9
Bit Mapped .....	10-10
Bit Mapped .....	10-11
Bit Mapped .....	10-11
S24 .....	10-11
DTR State Recognition .....	10-12
RTS/CTS Delay .....	10-12
Bit Mapped .....	10-12
Lookback Timer .....	10-12
Bit Mapped .....	10-13
Bit Mapped .....	10-13
S31 .....	10-13
Bit Mapped .....	10-14
S33 .....	10-14
Bit Mapped .....	10-14
DTR / Dial Backup Number to Dial .....	10-14
S36-S38 .....	10-14
Bit Mapped .....	10-15
S40-S43 .....	10-15
XON Character from DTE .....	10-15
XOFF Character from DTE .....	10-15
S46-48 .....	10-15
XON Character to DTE .....	10-15
XOFF Character to DTE .....	10-15
S51 .....	10-15
Bit Mapped .....	10-16
Automatic Rate Adaption Threshold .....	10-16
Flow Control .....	10-17
S55 .....	10-17

V.42 Compression Control .....	10-17
Bit Mapped .....	10-18
Inactivity Timer .....	10-18
Break Control .....	10-18
Bit Mapped .....	10-19
DTE Options .....	10-19
Disconnect Buffer Delay .....	10-20
Maximum Transmit Block Size .....	10-20
Auto-Reliable Fallback Character .....	10-20
S65-66 .....	10-20
Link Speed Status .....	10-21
S68 .....	10-21
DCE Independent Speed .....	10-22
Operating Mode .....	10-22
Operating Mode Status .....	10-23
Bit Mapped .....	10-24
Password Timeout .....	10-24
Callback Delay .....	10-24
Callback Retry .....	10-24
Callback Retry Delay .....	10-25
Lockout Threshold .....	10-25
Autocallback Timer .....	10-25
Break Length .....	10-25
Serial Port Speed .....	10-26
Minimum DCE Speed .....	10-27
S82-S87 .....	10-27
Modulation Type.....	10-28
S89-S90 .....	10-28
Current Modulation .....	10-28
S92 - S94 .....	10-28
V.34 Settings .....	10-29
V.34 Settings.....	10-29
S97 - S100 .....	10-29
<b>Chapter 11 V.25 bis Autodialer</b>	
GENERAL .....	11-1
Autodialer Command Strings and Parameters .....	11-1
GUIDELINES .....	11-2

Invalid Responses Explanations .....	11-3
DIAL PARAMETERS .....	11-4
V.25 BIS COMMAND AND RESPONSE DEFINITIONS .....	11-4
Dial Command .....	11-5
Program Number Command .....	11-6
Intermediate Call Progress Response .....	11-6
Dial Stored Number .....	11-6
Request List of Stored Numbers .....	11-7
Disregard Incoming Call .....	11-7
Connect Incoming Call .....	11-8
Redial Last Number .....	11-8
Link Number by Address .....	11-9
Request List of Linked Numbers .....	11-10
Request List of Version .....	11-11
MODEM OPTIONS COMMAND .....	11-11
Save Current Settings .....	11-13
Restore Factory Settings .....	11-13
Request List of Stored Options .....	11-14
OPTIONS .....	11-16
 <b>Chapter 12 Maintenance</b>	
GENERAL .....	12-1
FUSE .....	12-1
MAINTENANCE .....	12-1
 <b>Appendix A Specifications</b>	
<b>Appendix B Phone Jack Descriptions</b>	
LINE PIN FUNCTIONS .....	B-1
AUX PIN FUNCTIONS .....	B-1
 <b>Appendix C Strap Options</b>	
STRAP OPTION SELECTION .....	C-1
Removing the Cover .....	C-1
HARDWARE STRAPS .....	C-3
Tip and Ring Polarity .....	C-3
Ground Option Strap .....	C-3
QM Disable Option .....	C-4
QM Normal/Inverted .....	C-4

**Appendix D Fault Isolation Procedure**

FAULT ISOLATION PROCEDURE .....	D-1
Telephone Interface .....	D-1
Standard Phone .....	D-1
MODEM AND TELEPHONE LINE CHECK .....	D-2
Step 1 .....	D-2
Step 2 .....	D-3

**Appendix E Command Index and Defaults**

GENERAL .....	E-1
FACTORY OPTION SETS .....	E-19

**Appendix F Acronyms and Abbreviations**

.....	F-1
-------	-----

**Appendix G ASCII and EBCDIC Characters**

GENERAL .....	G-1
---------------	-----

**Service and Support**

**Index**

## **Figures**

### **Chapter 1**

1-1	Typical Front Pane 1 .....	1-4
1-2	Rear Panel (115 Vac Model) .....	1-4

### **Chapter 2**

2-1	Rear Panel Connections .....	2-1
2-2	Digital Interface Signals .....	2-2
2-3	Dial-up Connection .....	2-6
2-4	Leased Line Connection .....	2-8

### **Chapter 5**

5-1	Configuration Storage and Recall .....	5-39
-----	----------------------------------------	------

### **Chapter 7**

7-1	Local Analog Loopback .....	7-3
7-2	Local Analog with Test Pattern .....	7-5
7-3	Local Digital Loopback with Bilateral Loopback Enabled .....	7-6
7-4	Remote Digital Loopback with Digital Bilateral Loopback Enabled .....	7-7
7-5	Local Modem Initiating Remote Digital Loopback with Test Pattern .....	7-8

### **Chapter 10**

10-1	Changing S-Register Values .....	10-2
10-2	Calculating S-Register Values .....	10-3

### **Appendix C**

C-1	Cover Removal .....	C-1
C-2	Strap Locations .....	C-2
C-3	Typical Strap Configuration .....	C-3

## Tables

### Chapter 1

2-1	Digital Interface Signal Descriptions .....	2-3
-----	---------------------------------------------	-----

### Chapter 4

4-1	Menu Options .....	4-3
-----	--------------------	-----

### Chapter 7

7-1	Test Operating Mode Requirements .....	7-1
7-2	Test Commands .....	7-2

### Chapter 9

9-1	Modulation Values .....	9-7
-----	-------------------------	-----

### Chapter 11

11-1	V.25 bis Dial Parameters .....	11-4
------	--------------------------------	------

### Appendix E

E-1	AT Commands .....	E-1
E-2	Low Security Commands .....	E-11
E-3	High Security Commands .....	E-12
E-4	Fax Commands .....	E-13
E-5	Commands Valid Only in Fax Mode .....	E-13
E-6	Status Registers .....	E-14
E-7	V.25 bis Dialer Commands .....	E-16
E-8	Response Messages .....	E-17