

MAIN MENU		LCD MESSAGES				
M A I N 1		V.32 9600 IDLE	(Press NO to advance to MAIN 2)			
		V.32 9600 TALK	(When V.32 Talk is displayed press NO to advance to MAIN 2)			
		V.32 9600 TRAINING				
		V.32 9600 ONLINE				
MAIN MENU	SUBMENU	SUBMENU ITEM	ITEM OPTION	AT COMMAND	S-REG	
M A I N 2	DIAL STORED NUMBER?		DIAL # 1-9	YES/NO	DSn (n = 1-9)	--
M A I N 3	DISPLAY STATUS? (Status Only)	DTE SIGNALS	DTR ON/OFF DSR ON/OFF OH ON/OFF RI ON/OFF	DISPLAYS STATUS	--	--
		CARRIER DESCRIPTIONS	RECEIVE LEVEL NEAR END ECHO LEVEL FAR END ECHO LEVEL FAR END ECHO DELAY ESTIMATED DELAY FREQUENCY TRANSLATION	DISPLAYS STATUS	--	--
M A I N 4	SELECT TEST?	(4-WIRE ONLY)	LOCAL ANALOG LOOP	INITIATE/EXIT	&T1	S16
			LAL WITH TP	INITIATE/EXIT	&T8	S16
			REMOTE ANALOG LOOP	INITIATE/EXIT	&T2	S16
			RAL WITH TP	INITIATE/EXIT	&T9	S16
			LOCAL DIGITAL LOOP	INITIATE/EXIT	&T3	S16
			REMOTE DIGITAL LOOP	INITIATE/EXIT	&T6	S16
			RDL WITH TP	INITIATE/EXIT	&T7	S16
			TEST PATTERN	INITIATE/EXIT	%T	--

Table 3-1
Menu Options

MAIN MENU	SUBMENU	SUBMENU ITEM	ITEM OPTION	AT COMMAND	S-REG		
M A I N 5	MODIFY CONFIGURATION?	CHANGE DATA RATE?	DCE LINE SPEED	DTE SPEED 9600 TRELLIS 9600 UNCODED 4800 UNCODED 2400 V.22 bis 1200 V.22 bis 0-300 BELL 103	%B %B6 %B5 %B4 %B3 %B2 AT%B1	S69	
		CHANGE MODEM PARAMETERS?	FORCED ANSWER OR NORMAL ORIGINATE	NORM ORIGIN FORCED ANSWER	*OR *OR1	S14	
			V.32 FAST TRAIN	ENABLE/DIS	*FT1 / *FT	S29	
			AUTO RETRAIN	ENABLE/DIS	%E1 / %E	S60	
			TRANSMIT CLOCK	INTERNAL EXTERNAL RECEIVE	&X &X1 &X2	S27	
			LINE TYPE	LEASE: DIAL	&L1,2 / &L	S27	
			JACK TYPE	PERMISSIVE PROGRAM	%Z %Z1	--	
			LINE CURRENT DISCONNECT	OFF/8 MS/90 MS	*LC / *LC1 / *LC2	S32	
			LONG SPACE DISCONNECT	ENABLE/DIS	Y1 Y	S21	
			V.22 GUARD TONE	DIS/550/1800Hz	&G / &G1 / &G2	S23	
			(Leased Only)	2-WIRE/4-WIRE	2-WIRE / 4-WIRE	&L1 / &L2	S32
			DIAL BACKUP	MANUAL/AUTO	*DB / *DB1	S32	
			LOOKBACK TIMER	OFF / 15 / 30 / 45 / 60 MIN	--	S28	
			TRANSMIT LEVEL	0 TO - 15 dB	AT%TLn	S52	
			CHANGE MNP PARAMETERS?	MNP PROTOCOL	ENABLE/DIS	W + W2 / W + W1	S70
				AUTO FALLBACK/ DISCONNECT (If MNP Proto En)	DISCONNECT FALLBACK TO NON EC MODE	W2 W3	S70
				DTE SPEED (If MNP Proto Dis)	DTE = DCE CONSTANT DTE	%B / %B1-6	S69
				MNP FLOW CONTROL	DISABLE XON/XOFF UNILATERAL RTS/CTS	IQ IQ1 IQ2 IQ3	S54
				XON/XOFF PASS THROUGH	ENABLE/DIS	X1 / X	--

Table 3-1 (continued)
Menu Options

MAIN MENU	SUBMENU	SUBMENU ITEM	ITEM OPTION	AT COMMAND	S-REG
MAIN 5	CHANGE MNP PARAMETERS? (CONT)	MNP INACTIVITY TIMER	OFF/ 15/ 30/ 45/ 60/ 75/ 90 MIN	--	S58
		MNP BREAK CONTROL	0/ 1/ 2/ 3/ 4/ 5	!K, !K1, !K2 !K3, !K4, !K5	S59
	CHANGE DTE PARAMETERS?	OPERATION	SYNC ASYNC	&M1,2,3 &M	S27
		AT COMMAND SET	ENABLE/DIS	-- / *NT	S29
		DIAL METHOD (Sync)	ASYNC / DTR / MANUAL	&M1 / &M2 / &M3	S27
		DTR STATE	RESPOND IGNORE	&D1, &D2 / &D	S21
		DSR STATE	NORMAL FORCED HIGH	&S1 &S	S21
		DCD STATE	NORMAL/ FORCED HIGH/ OFF 5 SEC ON DISCONNECT/ FOLLOWS REMOTE RTS	&C1 &C &C2 &C3	S21
		CTS STATE	NORMAL FORCED HIGH	&R &R1	S21
		RTS/CTS DELAY	0 TO 90 MS (10 MS)	--	S26
		DTE COMMANDED FALLBACK	ENABLE/DIS	*FB1 / *FB	S53
		CHANGE TEST PARAMETERS?	BILATERAL ANALOG LOOP	ENABLE/DIS	*ANI / *AN
	BILATERAL DIGITAL LOOP		ENABLE/DIS	*DG1 / *DG	S34
	DTE LOCAL TEST		ENABLE/DIS	*LA1 / *LA	S34
	DTE REMOTE TEST		ENABLE/DIS	*RD1 / *RD	S34
	REMOTE COMMANDED		ENABLE/DIS	&T4 / &T5	S23
	TEST TIMEOUT		OFF/ 60/ 120/ 180/ 240 SEC	--	S18
	CHANGE DIAL PARAMETERS?	DIAL TYPE	PULSE TONE	P T	S14
		AUTODIAL #	OFF/ 1-9	*AUn (n=1-9)	--

Table 3-1 (continued)
Menu Options

MAIN MENU	SUBMENU	SUBMENU ITEM	ITEM OPTION	AT COMMAND	S-REG	
MAIN 5	MODIFY CONFIGURATION? (CONT)	CHANGE DIAL PARAMETERS? (CONT)	DIAL TONE	BLIND DIAL/ WAIT FOR DIAL TONE	X, X1, X3 / X2, X4	S22
			WAIT DELAY (Blind Dial)	1/ 2/ 4 8/ 16/ 32 SEC	--	S6
			PAUSE DELAY	1/ 2 4 8/ 16/ 32 SEC	--	S8
			CALL TIMEOUT	15/ 30 45/ 60/ 75/ 90/ 105/ 120 SEC	--	--
			ANSWER RING#X	1/ 2 4 8/ 16	--	S0
			CHANGE SPEAKER OPERATION?	VOLUME CONTROL	LOW/ MEDIUM/ HIGH	L1 / L2 / L3
	SPEAKER CONTROL	ON UNTIL CARR DETECT/ ALWAYS ON/ OFF WHILE DIALING/ ALWAYS OFF		M1 M2 M3 M	S22	
	LOAD/STORE OPTION SET?	LOAD FACTORY OPTION	NO/ 1/ 2/ 3/ 4	&Fn (n=1-4)	--	
		ARE YOU SURE	YES/ NO	--	--	
		STORE PRESENT OPTIONS	YES/ NO	&W	--	
		ARE YOU SURE	YES/ NO	--	--	
	MAIN 6	CHANGE PHONE NUMBERS?	PHONE NUMBER	NO/ NINE 31-CHAR NUMBERS	&Zn (n= phone # and dial modifiers) *CNn,X	--

Table 3-1 (continued)
Menu Options

OPTION SELECTION

Options are selected by pressing the YES/NO pushbuttons. When powered up the modem will go to the selected display under the Main Menu 1 header in Table 3-1. Any time a Main Menu is displayed, pressing NO scrolls down the Main Menu. When the end is reached, the display returns to main #2.

NO NO NO... NO