

V.3225 and V.3225L Manual

Compliments of

ARC ELECTRONICS

800-926-0226 / 281-302-6333

<http://www.arcelect.com/>
arc@arcelect.com

Appendix E	Menu Flow Charts;
Appendix F	Abbreviations and Acronyms;
Appendix G	ASCII and EBCDIC Character Table.
Index	
Toll Free Numbers	
Warranty	
Warranty Registration Card	

STATEMENT OF APPLICATION

This manual supports both the standalone and shelf mount units. Operation and function of either unit is identical. Where necessary, this manual provides detailed information in support of the standalone unit. Detailed information in support of the shelf mount unit can be found in the shelf installation and operation manual.

This manual supports both those units designed with Liquid Crystal Displays (LCDs) and those without.

Table of Contents

V.3225 / V.3225L

Chapter 1	Introduction	
GENERAL DESCRIPTION	1-1	
Functional	1-1	
Physical	1-2	
Standard and "L" Models	1-4	
HOW TO USE THIS MANUAL	1-4	
Specifications	1-4	
Option Selection	1-5	
Quick Startup	1-6	
Chapter 2	Installation	
GENERAL SITE SELECTION	2-1	
Tools Required	2-1	
Receipt Inspection	2-1	
ELECTRICAL INSTALLATION	2-1	
AC Power Connection	2-2	
DTE CONNECTION	2-2	
TELEPHONE CABLES	2-6	
TELEPHONE LINE CONNECTION	2-7	
PSTN Connection	2-7	
Permissive	2-7	
Programmable	2-7	
Leased Line Connection	2-9	
Chapter 3	Option Selection	
GENERAL STRAP OPTION SELECTION	3-1	
Removing Cover	3-1	
HARDWARE STRAPS	3-2	
Tip and Ring Polarity	3-5	
Ground Option Strap	3-5	
OM Disable Option	3-5	
LCD OPTION SELECTION	3-5	
MAIN MENU	3-6	
Menu Sequence	3-6	

Chapter 3 continued	OPTION SELECTION	3-11
	Main Menu	3-11
	Submenu	3-11
	Submenu Item	3-12
	Item Option	3-12
	Selecting the Option	3-12
Chapter 4 Operation	GENERAL	4-1
	CONTROLS AND INDICATORS	4-1
	LED DESCRIPTIONS	4-1
	Request to Send	4-1
	Clear to Send	4-1
	Quality Monitor	4-1
	Carrier Detect	4-1
	Received Data	4-1
	Transmit Data	4-1
	TALK (on the "L" model)	4-2
	POWERUP	4-2
	Quick Startup Procedure	4-2
	Manual Dialing	4-2
	Manual Answering	4-2
	Autodial (Front Panel)	4-3
	AT Command Dialing	4-3
	Software Communication Packages	4-3
	ERROR CONTROL	4-3
	FLOW CONTROL	4-4
	AUTOBAUD	4-4
	4-WIRE OPERATION	4-5
	2-WIRE OPERATION	4-5
	2-Wire Leased Line Operation	4-5
	2-Wire Dial-Up Operation	4-6
	REMOTE CONFIGURATION	4-6
	SECURE OPERATION	4-7
	Operating Without Security	4-7
	Operating With Security	4-8
	Remote Operation	4-8
	Local Operation	4-8
	Passwords	4-8
	LCD Indication of Security	4-9
	Security Reset	4-9
	Security Commands	4-10
	Restrictions in Security Operation	4-11

Chapter 4 continued	DIAL BACKUP	4-11
	PLACING A CALL	4-13
	Direct Connect with a Standard Telephone	4-13
	Direct Connect with an Exclusion Key	4-13
	Telephone	4-13
	Autodial From Front Panel	4-13
	Autodial with the AT Command Set	4-14
	ANSWERING A CALL	4-14
	Autoanswer	4-14
	Manual Answer	4-14
	CALL TERMINATION	4-14
	V.32 Cleardown	4-16
Chapter 5 Asynchronous Operating Commands	GENERAL	5-1
	COMMAND CATEGORIES	5-1
	OPERATION MODES	5-2
	Offline Command Mode	5-2
	Online Command Mode	5-2
	Data Mode	5-2
	SENDING COMMANDS TO THE MODEM	5-3
	Creating a Command Statement	5-3
	Autobaud	5-4
	Guidelines for Creating Command Statements	5-4
	Monitor Display	5-4
	Command Statement Buffer	5-5
	Backspace Key	5-5
	Repeating a Command A/.	5-5
	Numbered Commands	5-6
	Group Commands	5-6
	COMMAND TABLE	5-8
	RESPONSE COMMANDS	5-11
	How Response Messages Work	5-11
	Selecting Response Form V	5-11
	Electing to Use Response Messages	5-11
	Enabled/Disabled Response Displays Q	5-12
	Dial Parameter and Connect Speed	5-12
	Displays X	5-12
	Number Code Application *RC	5-14
	Response Number Codes/Messages	5-15

Chapter 5
continued

Chapter 5
continued

DIAL COMMANDS	5-16
Dialing D	5-16
Tone Dialing T	5-17
Pulse Dialing P	5-17
Insert Long Pause,	5-17
Wait for Second Dial Tone W	5-17
² Switch Hook I	5-18
Switching to Answer Mode After	
Dialing R	5-18
Wait for 5 Seconds of Silence @	5-18
Remaining in Command Mode ;	5-19
Dialing a Stored Telephone Command	
Line S	5-19
Voice Calls	5-20
Switch from Voice to Data	5-20
ANSWERING A CALL	5-21
Manual Answer	5-21
AT Command Answer A	5-21
Autanswer S0	5-21
TERMINAL INTERFACE COMMANDS	5-22
Data Carrier Detect & C	5-22
Data Set Ready & S	5-23
Data Terminal Ready & D	5-23
Serial Port Ring Indicate R	5-24
Request to Send / Clear to Send & R	5-24
DTE Fallback (Pin 23) *FB	5-25
TEST COMMANDS & T	5-26
Bilateral Test Enable/Disable *AN *DG	5-27
DTE Controlled Remote Digital Loopback	
(Pin 21) *RD	5-27
DTE Controlled Local Analog Loopback	
(Pin 18) *LA	5-28
GENERAL COMMANDS	5-29
Changing from Data Mode to Command	
Mode + + +	5-29
Local Character Echo E	5-29
Hanging Up H	5-30
V.32 Cleardown H2, H3	5-30
EPROM Check I	5-30
Speaker Volume L	5-30
Speaker Control M	5-31
Return Online O	5-31
Long Space Disconnect Y	5-31

Guard Tones & G	5-32
Dial/Leased Line & L	5-32
Asynchronous/Synchronous Mode	
Selection & M	5-32
Make/Break Dial Pulse Ratio & P	5-33
Synchronous Transmit Clock Source & X	5-34
DCE Speed %B	5-34
Disconnect Buffer Delay %D	5-35
Auto Retrain %E	5-35
Product Revision Level %V	5-35
Product Serial Number %V	5-35
Permissive/Programmable %Z	5-36
Talk / Data *DA	5-36
Dial Backup *DB	5-36
V.32 Fast Train *FT	5-37
Return to Leased Line From Dial Backup	
*LB	5-37
Line Current Disconnect *LC	5-37
Manual Dial Backup *LD	5-37
Disable AT Command Set *NT	5-38
Answer / Originate *OR	5-38
Leased Line Transmit Level *TLn	5-38
CONFIGURATION COMMANDS	5-39
Modern Powerup Configuration & W	5-39
Reset to Stored Configuration Z	5-41
Load Factory Options & F	5-41
View Configuration Profiles/Received	
Signal Parameters & V	5-41
Storing a Telephone Command Line & Z	5-42
Retaining/Restoring Options *RO	5-43
REMOTE CONFIGURATION	5-44
Security Code %P=	5-44
Remote Configuration %T=	5-44
PROTOCOL COMMANDS	5-45
Operating Mode \N	5-45
Serial Port (DTE) bps Adjust V	5-46
Data Link Flow Control \G	5-46
Serial Port Flow Control \Q	5-47
XON/XOFF Pass Through \X	5-48
MNP Data Compression %C	5-49
Auto-Reliable Fallback Character %An	5-49
Break Control \Kn	5-50
Maximum MNP Block Size \A	5-52

Chapter 5
continued

MNP Inactivity Timer VT	5-52
Protocol Result Codes V	5-52
Transmit Break/Set Break Length VB	5-53
Set Auto-Reliable Buffer VC	5-53
Originate MNP Link VD	5-54
*Accept an MNP Link VE	5-54
Switch from Normal to MNP VF	5-54
Switch from MNP to Normal VG	5-55

Chapter 6
Status Registers

STATUS REGISTERS TUTORIAL	6-1
S-REGISTER OPERATION	6-4
Individual Bit Command Sn (bit#) = v	6-4
Autoanswer S0 = 0-255	6-6
Ring Count S1 = 0-255	6-6
Escape Character S2 = 0-255	6-6
End-of-Line Character S3 = 0-127	6-6
Line Feed Character S4 = 0-127	6-6
Backspace Character S5 = 0-127	6-6
Pause Before Dialing S6 = 0-255	6-7
Pause for Ring Back Detection/Pause for Carrier Detection S7 = 1-30	6-7
Pause Interval for Comma S8 = 0-255	6-7
Carrier Detect Time S9 = 0-255	6-7
Lost Carrier Detect Time S10 = 0-255	6-7
DTMF Tone Duration S11	6-8
Escape Sequence Pause Interval S12 = 0-255	6-8
S13	6-9
Bit Mapped S14	6-9
S15	6-9
System Tests S16	6-10
S17	6-10
Test Timeout S18	6-10
S19, 20	6-10
Bit Mapped S21	6-11
Bit Mapped S22	6-12
Bit Mapped S23	6-12
S24	6-12
DTR State Recognition Time S25	6-13
RTS/CTS Delay S26	6-13
Bit Mapped S27	6-13
Lookback Timer S28	6-13
Bit Mapped S29	6-14

Chapter 6
continued

Bit Mapped S30	6-14
S31	6-14
Bit Mapped S32	6-15
S33	6-15
Bit Mapped S34	6-15
S35-51	6-15
Bit Mapped S52	6-16
801 V.32 Timeout S53	6-16
Flow Control S54	6-16
S55, 56	6-16
Number Code Application S57	6-17
MNP Inactivity Timer S58	6-17
MNP Break Control S59	6-17
Bit Mapped S60	6-18
DTE Speed S61	6-18
Disconnect Buffer Delay S62	6-19
Maximum MNP Block Size S63	6-19
Auto-Reliable fallback Character S64	6-19
S65-66	6-19
Link Speed Status S67	6-19
S68	6-20
DCE Independent Speed S69	6-20
Operating Mode S70	6-20
Operating Mode Status S71	6-21
Bit Mapped S72	6-21
S73-77	6-21
Autocallback Timer S78	6-22
Break Length S79	6-22
S80-83	6-22
Bit Mapped S84	6-22
S85-90	6-22

Chapter 7
V.25 bis Autodialer

GENERAL	7-1
Autodialer Command Strings and Parameters	7-1
GUIDELINES	7-2
Invalid Responses Explanations	7-3
DIAL PARAMETERS	7-4

Chapter 7 continued

V.25 bis COMMAND AND RESPONSE DEFINITIONS

- Dial Command CRN *nn...n* 7-5
- Program Number Command PRN *a; mm...n* 7-6
- Intermediate Call Progress Responses 7-6
- Dial Stored Number CRS *a* 7-7
- Request List of Stored Numbers RLN 7-7
- Disregard Incoming Call DIC 7-8
- Connect Incoming Call CIC 7-9
- Redial Last Number CRR *n* 7-9
- Link Number by Address PRL *a;b* 7-10
- Request List of Linked Number RLL 7-11
- Request List of Version RLV 7-12

MODEM OPTIONS COMMAND

- PRO *xx;yy;0..0* 7-13
- Save Current Settings PRK 7-15
- Restore Factory Settings PRP *n* 7-16
- Request List of Stored Options
- RLO *xx;yy* 7-17
- OPTIONS 7-19
- Rate Select 7-24

Chapter 8 Protocols

- MNP / RELIABLE MODE 8-1
- AUTO-RELIABLE 8-1
- CONSTANT SPEED INTERFACE 8-1
- DATA COMPRESSION 8-1
- NORMAL MODE 8-1
- DIRECT MODE 8-1
- FLOW CONTROL 8-2

Chapter 9 Maintenance

- GENERAL 9-1
- FUSE 9-1
- MAINTENANCE 9-1

Appendix A Specifications

- A-1

Appendix B Phone Jack Descriptions

- DIAL LINE PIN FUNCTIONS B-1
- TEI.SET/LEASED LINE PIN FUNCTIONS B-1

Appendix C Fault Isolation Procedure

- FAULT ISOLATION PROCEDURE C-1
- TELEPHONE INTERFACE C-1
- STANDARD PHONE C-2
- EXCLUSION KEY TELEPHONE C-2
- FALLBACK RATES C-2
- MODEM AND TELEPHONE LINE CHECK C-2
- Step 1 C-2
- Step 2 C-3
- Step 3 C-5
- AT COMMAND RECOVERY FOR "L" MODELS C-6

Appendix D Command Index and Defaults

- GENERAL D-1
- STATUS REGISTERS D-10
- V.25 bis DIALER COMMANDS D-12
- FACTORY OPTION SETS D-14

Appendix E Abbreviations and Acronyms

- E-1

Appendix F ASCII and EBCDIC Character Table

- F-1

List of Tables
V.3225 / V.3225L

List of Figures
V.3225 / V.3225L

Table

Figure

Chapter 2 Installation	2-1	Digital Interface signal Descriptions	2-4
Chapter 3 Option Selection	3-1	Menu Options	3-8
Chapter 5 Asynchronous Operating Commands	5-1 5-2 5-3 5-4	AT Commands Response Codes/Messages Dial Modifiers Operating Modes and Conditions	5-8 5-15 5-16 5-45
Chapter 7 V.25 bis Autodialer	7-1	V.25bis Dial Parameters	7-4

Chapter 1 Introduction	1-1 1-2 1-3	Front Panel Typical Front Panel for "L" Model Rear Panel	1-3 1-3 1-4
Chapter 2 Installation	2-1 2-2 2-3 2-4 2-5	Rear Panel I/O Digital Interface Signal Descriptions Telephone Cables Permissive or Programmable Connection Leased Line Connection	2-2 2-4 2-6 2-8 2-10
Chapter 3 Option Selection	3-1 3-2 3-3	Cover Removal Option Strap Configuration Strap Locations	3-3 3-3 3-4
Chapter 5 Asynchronous Operating Commands	5-1	Configuration Storage and Recall	5-40
Chapter 6 Status Registers	6-1 6-2	Changing S-Register Values Calculating S-Register Values	6-2 6-3